


1

PLACE TOTIMRACING KIT ON A RIGID FLAT SURFACE. IDENTIFY THE "SIDE UP" SYMBOL

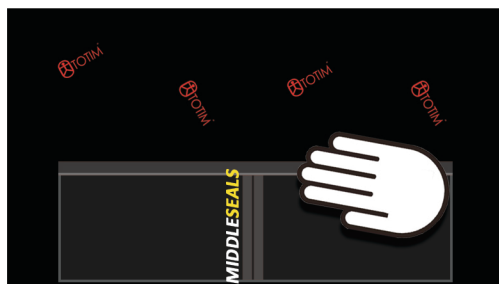

2

PUT YOUR HANDS IN A DIAGONAL POSITION AT AN ANGLE SO THAT YOU POP THE MIDDLE SEAL WHILE AVOIDING ACCIDENTAL POP OF THE TOP SEAL




APPLY FIRM PRESSURE DOWN, AT AN ANGLE, AWAY FROM TOP SEAL AND TOWARD THE MIDDLE SEAL UNTIL THE POCKET POPS. DO THE SAME TO THE POCKET ON THE OTHER SIDE. YOU SHOULD BE PRESSING IN THE DIRECTION OF THE GREEN ARROW IF YOU REFER TO THE IMAGE



3


POP THE POCKETS IN THE DIRECTION OF THE YELLOW ARROW BY SLOWLY INCREASING PRESSURE UNTIL THE BAG POPS

**MIXACTIVATIONTIME: ABOUT50SECONDS**

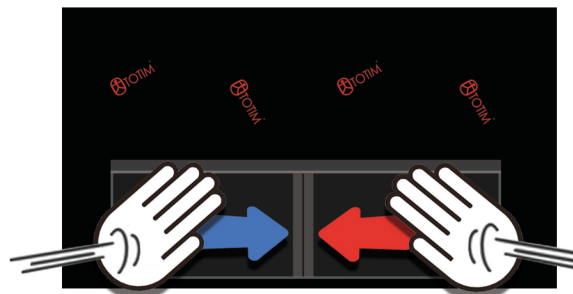

4

ONCE BOTH POCKETS ARE POPPED, START MIXING THE TWO LIQUIDS (FOAM) AS FAST AS POSSIBLE. THE POCKET WILL START TO EXPAND UNTIL IT POPS THE TOP SEAL ON ITS OWN

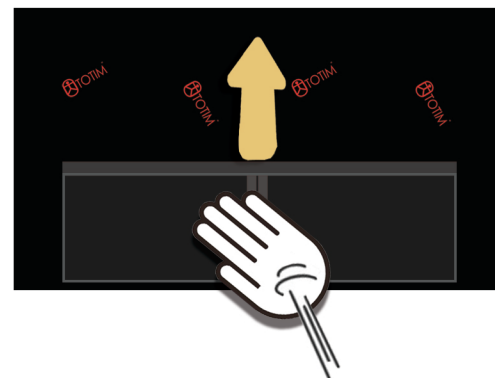

5

AFTER TOP SEAL IS BROKEN, REMOVE ALL FOAM FROM INSIDE POCKET

BASED ON YOUR NEEDS YOU CAN SPREAD FOAM WHEREVER IT IS NEEDED, BUT MOST COMMONLY ITS EVEN DOWN THE CENTER

AFTER 30-40 SECONDS FROM TOP SEAL POP, PUT BAG INTO THE CAR AND DRIVER SHOULD GET IN RIGHT AWAY, MAINTAINING THE "SIDE UP" POSITION. 2 CREW MEMBERS ARE BEST TO HOLD ALL 4 CORNERS OF THE BAG AS TAUGHT AS POSSIBLE TO AVOID CREASES IN THE BAG AS MUCH AS POSSIBLE

- ➡ DRIVER SHOULD PRESS INTO BAG EVENLY TO ENSURE EVEN SPREAD OF FOAM
- ➡ WAIT TIME FOR DRIVER 20-30 MINUTES
- ➡ LEAVE SEAT IN CAR FOR 40 MINUTES BEFORE CUTTING